

Note: Refer to Faxback Doc. # 1248 for Main Logic Board Layout.

Jumper	Settings	Description
Rom Size Select Jumper	E1 and E2 installed E3 and E4 installed	4MB ROM enabled *
Diskette Drive Connector Address Select	E6 and E7 installed E7 and E8 installed	Primary * (I/O Ports 3F0-3F7) Secondary (I/O Ports 370-377)
Diskette Drive Connector Enable	E9 and E10 installed E10 and E11 installed	Disabled Enabled *
Interrupt Jumpers	E16 and E17 installed E17 and E18 installed E18 and E19 installed	HDIRQ=IRQ2 HDIRQ=IRQ5 * VSYNC=IRQ5
* Default Setting ** reserved for Factory Use		
Satellite Board:		
Jumper	Settings	Description
Microphone/Line Audio Input Jumper	E1 and E2 installed E2 and E3 installed	Line-Level audio input enabled Microphone enabled *
Earphone/Line Audio Output Jumper	E4 and E5 installed E5 and E6 installed	Line-level audio output enabled Earphone enabled *
* Default Setting		