

The SmartDrive has 3 pairs of jumper pins near the 40 pin connector at the rear of the drive.

Jumper	Setting	Function
DS	jumpered*	Indicates this drive is the master drive
DS	not Jumpered	Indicates this drive is a slave drive.
DM	Installed	Indicates that a ProDrive P40At or P80AT is installed on the bus.
DM	not Jumpered*	Indicates that no proDrive P40At or P80AT is installed on the bus.
SP	Jumpered	Enables self-seek mode.
SP	not Jumpered*	Disables self-seek mode.

NOTE: \* represents default settings.

Jumper Configuration for Single Drive System:

DS	Jumpered
DM	Not Jumpered
SP	Not Jumpered

Daisy Chain (two drive), Jumper Configuration for Primary (master) Drive:

DS	Jumpered
DM	Not Jumpered
SP	Jumpered

\* Note: The owner's manual may state that SP and DS should not be jumpered at the same time. The manual is incorrect.

Daisy Chain (two drive), Jumper Configuration for Secondary (slave) Drive:

DS	Not jumpered
DM	Not jumpered
SP	Not jumpered

(css 07/29/93)

□