



(Front of Printer)

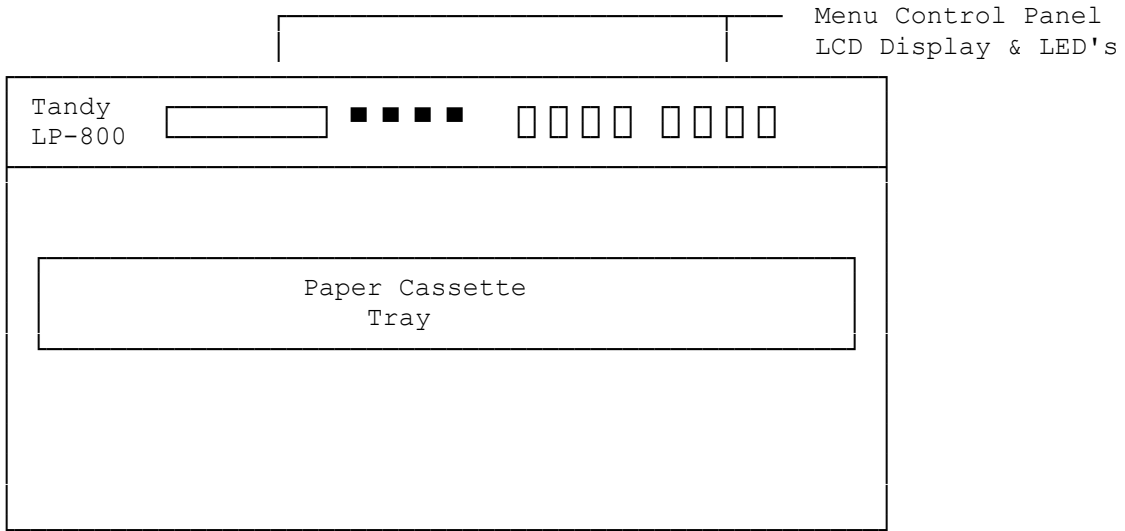

(Back of Printer)

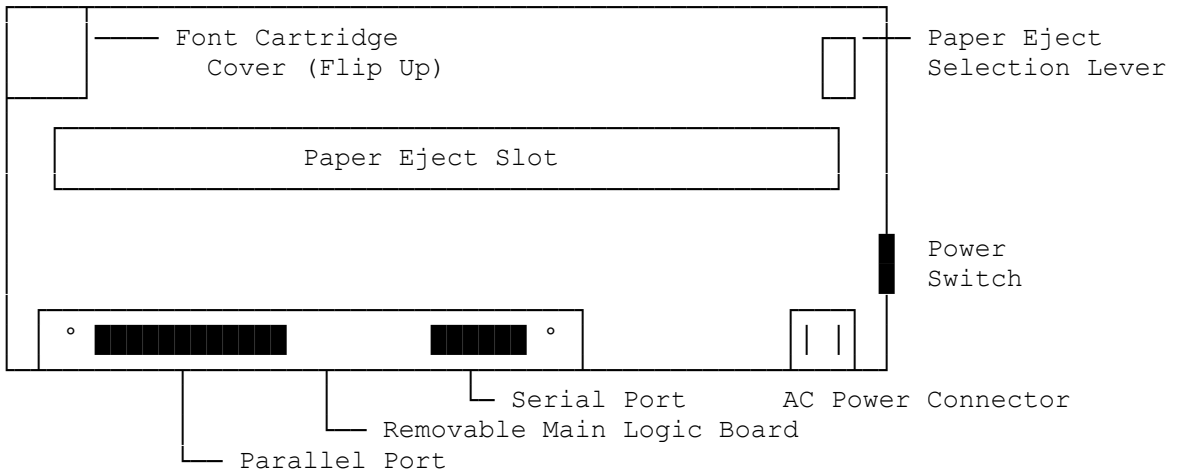

Menu Control Panel:

One LCD display, 4 LED's, and 8 function buttons are used to configure and control the printers functions. See Faxback Document # 4100 for menu usage instruction, and Faxback Documents # 4101, 4102, 4103, 4104, 4105, and 4106 for a complete list of menu choices.

Paper Cassette Tray:

Used to hold up to 250 sheets of standard or legal paper. This tray is removable.

Paper Eject Selection Lever:

Towards the front of the printer will eject the paper face-down on the top of the printer. Towards the back of the printer, pages eject from the back of the printer face-up.

Note: Use the face-up Eject mode for thick paper, envelopes, transparent sheets and labels.

Power Switch:

Rock the switch towards the back to turn ON the printer. Towards the front to turn OFF the printer.

Font Cartridge Cover:

Flip this cover up to install optional HP compatible font cards.

Note: The font card should be removed if the main logic board needs to be accessed.

Removable Main Logic Board:

Loosen the two thumb screws on each side of the board and slide the main logic board out to gain access to the printers DIP switches. The DIP switches are located between the parallel and serial interface connectors.

RS232C Configuration

RS-422A Configuration

Switch	USA *	Europe	Switch	USA	Europe
1	ON	OFF	1	ON	OFF
2	OFF	OFF	2	OFF	OFF
3	OFF	OFF	3	OFF	OFF
4	OFF	OFF	4	ON	ON
5	OFF	OFF	5	OFF	OFF
6	OFF	OFF	6	ON	ON
7	OFF	OFF	7	ON	ON
8	ON	ON	8	OFF	OFF

* Indicates the default configuration

DWS2

Memory Configuration

2 MB

3 MB

3 MB

4 MB

5 MB

	1 MB Side A (only)	1 MB Side A 1 MB Side B	2 MB Side A (only)	2 MB Side A 1 MB Side B	2 MB Side A 2 MB Side B
1	ON *	ON	OFF	OFF	OFF
2	OFF*	OFF	OFF	ON	OFF
3	OFF*	OFF	ON	ON	ON
4	ON *	ON	OFF	OFF	OFF

* Indicates the default setting.

Faxback Document # 4098 will give detailed information on setting the DIP switches.