

The print head adjustment control is on the right side of the printer, below the platen knob. It adjusts the gap between the print head and the platen for using various paper weights. Adjust the print head according to the paper thickness variations, as described below.

- 1 sheet of paper - Position 1
- 2 sheets of paper - Position 2
- 3 sheets of paper - Position 2 or 3
- 4 sheets of paper - Position 3 or 4



Note: When installing/removing the ribbon cassette, use Position 4.