

(IBM Proprinter XL emulation)

DEC.	HEX.	SYMBOL	OPERATION
0	(00)	NUL	NULL
7	(07)	BEL	Buzzer
8	(08)	BS	Backspace
9	(09)	HT	Horizontal Tab
10	(0A)	LF	Line Feed
11	(0B)	VT	Vertical Tab
12	(0C)	FF	Form Feed
13	(0D)	CR	Carriage Return
14	(0E)	SO	Double Width printing
15	(0F)	SI	Select Condensed printing
17	(11)	DC1	Select Printer
18	(12)	DC2	Select Standard 10 CPI printing
20	(14)	DC4	Cancel Double Width printing
24	(18)	CAN	Cancel
27 8	(1B) (08)	ESC BS	Backspace (Same as BS)
27 9	(1B) (09)	ESC HT	Horizontal tab (Same as HT)
27 10	(1B) (0A)	ESC LF	Line Feed (Same as LF)
27 11	(1B) (0B)	ESC VT	Vertical tab (Same as VT)
27 12	(1B) (0C)	ESC FF	Form feed (Same as FF)
27 13	(1B) (0D)	ESC CR	Carriage Return (Same as CR)
27 14	(1B) (0E)	ESC SO	Double-width printing (Same as SO)
27 15	(1B) (0F)	ESC SI	Select condensed printing (Same as SI)

27	(1B)	ESC	Select printer (Same as DC1)
17	(11)	DC1	
27	(1B)	ESC	Select Standard 10 CPI printing
18	(12)	DC2	(Same as DC2)
27	(1B)	ESC	Cancel double-width
20	(14)	DC4	(Same as DC4)
27	(1B)	ESC	Cancel (Same as CAN)
24	(18)	CAN	
27	(1B)	ESC	Underlining
45	(2D)	-	
n	n	n	
27	(1B)	ESC	Set 1/8" Line feed
48	(30)	0	
27	(1B)	ESC	Set 7/72" Line feed
49	(31)	1	
27	(1B)	ESC	Activate LF Pitch That
50	(32)	2	Was Set By ESC A
27	(1B)	ESC	Set n/216" Line feed
51	(33)	3	
n	n	n	
27	(1B)	ESC	Set Top of Form
52	(34)	4	
27	(1B)	ESC	Set Auto Line feed
53	(35)	5	
n	n	n	
27	(1B)	ESC	Select Character Set 2
54	(36)	6	
27	(1B)	ESC	Select Character Set 1
55	(37)	7	
27	(1B)	ESC	Select compressed printing
58	(3A)	:	
27	(1B)	ESC	Define downloading characters
61	(3D)	=	
27	(1B)	ESC	Set line spacing
65	(41)	A	
n	n	n	
27	(1B)	ESC	Set Vertical Tab stop
66	(42)	B	
n1	n1	n1	
0	(00)	NUL	

27	(1B)	ESC	Set Form Length in lines
67	(43)	C	
n	n	n	
27	(1B)	ESC	Set Form Length in inches
67	(43)	C	
0	(00)	NUL	
n	n	n	
27	(1B)	ESC	Set Horizontal Tab
68	(44)	D	
n1	n1	n1	
0	(00)	NUL	
27	(1B)	ESC	Set Emphasized Printing
69	(45)	E	
27	(1B)	ESC	Cancel Emphasized Print
70	(46)	F	
27	(1B)	ESC	Set Double-Strike Printing
71	(47)	G	
27	(1B)	ESC	Reset Double-Strike Printing
72	(48)	H	
27	(1B)	ESC	Select Print Mode
73	(49)	I	
n	n	n	
27	(1B)	ESC	Variable Line Spacing
74	(4A)	J	
n	n	n	
27	(1B)	ESC	Normal Density Bit Image Mode
75	(48)	K	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Double Density Bit Image Mode
76	(4C)	L	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Set Skip Perforation
78	(4E)	N	
n	n	n	
27	(1B)	ESC	Cancel Skip Perforation
79	(4F)	O	
27	(1B)	ESC	Select or Deselect
80	(50)	P	Proportional Characters
n	n	n	
27	(1B)	ESC	Deselect Printer

81	(51)	Q	
22	(16)	22	
27	(1B)	ESC	Set Default Tab
82	(52)	R	
27	(1B)	ESC	Set Super-/Subscript
83	(53)	S	
n	n	n	
27	(1B)	ESC	Cancel Super-/Subscript
84	(54)	T	
27	(1B)	ESC	Set bi/Unidirectional Print
85	(55)	U	
n	n	n	
27	(1B)	ESC	Continuous Double Width printing
87	(57)	W	
n	n	n	
27	(1B)	ESC	Set Left/Right Margin
88	(58)	X	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Double Density Bit Image Mode
89	(59)	Y	(Normal speed)
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Quadruple Density Bit Image Mode
90	(5A)	Z	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Double Height printing
91	(5B)	[
64	(40)	@	
27	(1B)	ESC	Print Continuously from
92	(5c)	\	All Characters Chart
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Reverse Line Feed
93	(5D)]	
27	(1B)	ESC	Print One Character from
94	(5E)	^	All Characters Chart
n	n	n	
27	(1B)	ESC	Overscoring
95	(5F)	_	
n	n	n	