



Power Switch:

Rock the switch backward to turn ON the DMP-250. Rock the switch forward to turn OFF the printer.

Paper Selector:

Pull the paper selector forward to select tractor feed paper, or backward for single sheet paper.

Control Panel:

One Display, two indicators, a mode selection bar, menu labels, and four buttons allow the user to custom configure options on the DMP 250. Faxback Document # 4238 will provide specific instructions on using the control panel.

Paper Adjustment Knob:

Used to make adjustments to the print start position. Clockwise to advance the paper, counterclockwise to retract the paper.

Color Ribbon Adjustment:

Used to adjust the Color Ribbon tracking. If colors run together or the wrong color is printed, this adjustment will correct the print head/color ribbon alignment. Faxback Document # 4221 will provide additional information on color ribbon adjustment.