

| Decimal | Hex | Meaning |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|-----------------------------------|
| 08 n | 08 n | Backspace n/120" (1 < n < 255) |
| 10 | 0A | Line Feed * |
| 13 | 0D | Carriage Return with Line Feed ** |
| 14 | 0E | End Underline |
| 15 | 0F | Start Underline |
| 27 01 | 1B 01 | 1/120" Space |
| 27 02 | 1B 02 | 2/120" Space |
| 27 03 | 1B 03 | 3/120" Space |
| 27 04 | 1B 04 | 4/120" Space |
| 27 05 | 1B 05 | 5/120" Space |
| 27 06 | 1B 06 | 6/120" Space |
| 27 07 | 1B 07 | 7/120" Space |
| 27 08 | 1B 08 | 8/120" Space |
| 27 09 | 1B 09 | 9/120" Space |
| 27 10 | 1B 0A | Reverse Line Feed * |
| 27 14 | 1B 0E | 12 Pitch Select |
| 27 15 | 1B 0F | 10 Pitch Select |
| 27 17 | 1B 11 | Proportional Space Select |
| 27 21 | 1B 15 | Start Carriage Return Only ** |
| 27 22 | 1B 16 | End Carriage Return Only ** |
| 27 24 | 1B 18 | Enters External Program Mode *** |
| 27 25 | 1B 19 | Exits External Program Mode *** |
| 27 26 | 1B 1A | 1/48" Line Feed |
| 27 28 | 1B 1C | Half Line Feed |
| 27 30 | 1B 1E | Reverse Half Line Feed |
| 27 31 | 1B 1F | Bold Print On |
| 27 56 | 1B 38 | 1/8" Line Feed |
| * Line feeds may be sent from machine-language programs, but not from BASIC's LPRINT statement. See the Technical Information section of your computer owner's manual for details on sending line feeds. | | |
| ** Normally, CHR\$(13) causes a carriage return plus a line feed. However, after a CHR\$(27);CHR\$(21) is sent, a CHR\$(13) causes a carriage return only; CHR\$(27);CHR\$(22) causes a return to normal. | | |
| *** See EXTERNAL PROGRAM MODE section of this manual. | | |