

INTERFACE BOARD JUMPER CONFIGURATION TABLE

Jumper	Function	Assignment
JP1	Address Select	Removed - (Default) Installed - Secondary addresses 170 through 177, 376 through 377 decoded (for systems having this capability)
JP2	I/O Channel Ready	Installed - (Default) Gates I/O Channel Ready to the system bus
JP3		Removed - (Default) Normal operation
JP4		Installed - (Default) Normal operation
JP5		Removed - (Default) Normal operation
JP6	Active	Installed - (Default) Normal operation. Enables activity LED on interface board. Removed - Disables interface board activity LED.

(DTC/jlc-03/27/94)