

For your information, the following are the pin assignments for the DB-25 and Centronics connectors for a parallel interface. The pin assignments of the modular jack are also shown.

Pin Assignments of DB-25 Parallel Interface.

Pin #	Pin Function	Pin #	Pin Function
1	/STROBE	10	/ACKNOWLEDGE
2	DATA BIT 0	11	BUSY
3	DATA BIT 1	12	PAPER END
4	DATA BIT 2	13	SELECT OUT
5	DATA BIT 3	14	/AUTO FEED
6	DATA BIT 4	15	/ERROR
7	DATA BIT 5	16	/INITIALIZE PRINTER
8	DATA BIT 6	17	/SELECT IN
9	DATA BIT 7	18-25	GROUND

Pin Assignments of Centronics 36-pin Parallel Interface.

Pin #	Pin Function	Pin #	Pin Function
1	/STROBE	10	/ACKNOWLEDGE
2	DATA BIT 0	11	BUSY
3	DATA BIT 1	12	PAPER END
4	DATA BIT 2	13	SELECT OUT
5	DATA BIT 3	14	/AUTO FEED
6	DATA BIT 4	15, 17-18, 34-35	NOT USED
7	DATA BIT 5	16, 19-30, 33	GROUND
8	DATA BIT 6	31	/INITIALIZE PRINTER
9	DATA BIT 7	32	/ERROR

(smc-11/05/93)

□