



#### Vertical Size:

If necessary, turn the Vertical Size control clockwise to make the display larger or counterclockwise to make the display smaller.

#### Horizontal Center:

If necessary, turn the Horizontal Center control clockwise to move the display to the left or counterclockwise to move it to the right.

#### Contrast and Brightness:

Adjust the contrast and brightness controls to suit the rooms lighting and your viewing preferences.

#### Power ON/OFF:

To turn on the VGM-150, press POWER. The POWER indicator lights. Press POWER again to turn off the monitor.

**CAUTION:** If the same characters or graphics are shown for a long period of time with the contrast and brightness controls set to their maximum positions, part of the screen might be damaged.