

FUNCTION on the TV's front panel or SET-UP on the remote control selects the different on-screen function controls.

Press the button until the function you want to set appears on the TV.

```
INPUT SELECTION
--> AIR
    CABLE
    VIDEO
```

SETTING THE ON-SCREEN LANGUAGE

1. Press SET-UP or FUNCTION until LANGUAGE appears on the screen.

```
LANGUAGE
--> ENGLISH
    ESPANOL
```

2. Press VOLUME + or - so the arrow points to English or Spanish.

```
LANGUAGE
--> ENGLISH
    ESPANOL
```

3. The on-screen display automatically clears in 3 seconds. Or press RECALL to clear it.

All on-screen displays are not in the selected language.

SELECTING THE INPUT SIGNAL

1. Press SET-UP or FUNCTION until INPUT SELECTION appears on the screen.

```
INPUT SELECTION
    AIR
--> CABLE
    VIDEO
```

2. Press VOLUME + or - so the arrow points to AIR, CABLE, or VIDEO.


Select AIR if you are using an antenna or CABLE if you are using a cable service. Select VIDEO to view the audio/video source connected to the TV's input jacks.

NOTE: You cannot press SET-UP on the remote control to select VIDEO as the input signal. Press TV/VIDEO on the remote control to select VIDEO.

3. The on-screen display automatically clears in 3 seconds. Or press RECALL to clear it.

SELECTING TV OR VIDEO USING THE REMOTE CONTROL

Press TV/VIDEO on the remote control to view the selected input signal (TV) or the audio/video source connected to the TV's input jacks (VIDEO).

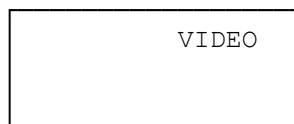


USING AUTOMATIC AND MANUAL CHANNEL PROGRAMMING


When you turn on the TV for the first time, use the automatic channel programming feature to scan and memorize all active broadcast and cable channels in your area. If there are additional channels you want to add or delete, you can manually add or delete those channels.

Using Automatic Programming

1. Press TV/VIDEO so TV is selected.
2. Press SET-UP on the remote control or FUNCTION on the front panel until AUTO PROGRAM appears on the screen.

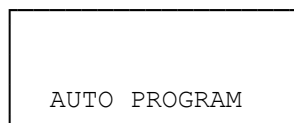

3. Press VOLUME + or -, and the TV automatically scans and memorizes all the active channels in your area.

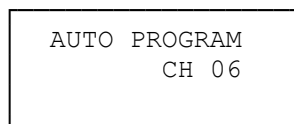

When the TV has scanned and stored all the active channels, it stops on the first programmed channel. You can also press any button on the remote controls or front panel to stop automatic programming.

After the TV completes automatic channel programming, it skips inactive channels when you use CHANNEL + or -. You can repeat automatic programming at any time.

If the TV is unplugged for more than 24 hours, you must repeat automatic channel programming to restore channels in memory.

Manually Adding a Channel

To add a channel that was not stored during automatic programming, follow these steps.

1. Press TV/VIDEO so TV is selected.
2. Select the input signal (AIR or CABLE).

```
INPUT SELECTION
--> AIR
    CABLE
    VIDEO
```

3. Use the remote control's number button(s) to select the channel you want to store.

```
CH 10
```

4. Press SET-UP on the remote control until the channel number, ADD, and DELETE appear on the screen.

```
CH 10 AIR
--> ADD
    DELETE
```

5. Press VOLUME + or - so the arrow points to ADD.

```
CH 10 AIR
--> ADD
    DELETE
```

6. The on-screen display automatically clears in 3 seconds. Or press RECALL to clear it.

Manually Deleting a Channel

If the TV stored a channel you do not want, follow these steps to delete the channel from memory.

1. Press TV/VIDEO so TV is selected.
2. Select AIR or CABLE for the band in which the station is stored (see "Selecting the Input Signal").

```
INPUT SELECTION
--> AIR
    CABLE
```

VIDEO

3. Press CHANNEL +/- or the remote control's number button(s) to select the channel you want to delete.

CH 10

4. Press SET-UP on the remote control until the channel number, ADD, and DELETE appear on the screen.

CH 10 AIR
--> ADD
DELETE

5. Press VOLUME + or - so the arrow points to DELETE.

CH 10 AIR
ADD
--> DELETE

6. The on-screen display automatically clears in 3 seconds. Or press RECALL to clear it.

USING AUTO DEMONSTRATION

Auto demonstration allows you to review all the menus programmed in the TV set.

1. Press SET-UP on the remote control until AUTO DEMO appears on the screen.

AUTO DEMO

2. Press VOLUME + or -, and the demonstration starts. The screen shows the different controls and adjusts them so you can see how each one works.

AUTO
DEMONSTRATION

When the demonstration reaches the last display, it starts again from

the beginning.

3. To stop auto demonstration, press any button on the remote control or front panel. The picture returns to the settings selected before the demonstration.

(ALL-10/19/94)