

INSTALLING THE REMOTE CONTROL'S BATTERIES

The remote control requires two AAA batteries (not included) for operation. We recommend alkaline batteries (Radio Shack Cat. No. 23-555).

1. Remove the battery compartment cover by pressing the cover's latch in the direction of the arrow and lifting it out.
2. Insert two fresh batteries in the compartment, as indicated by the polarity symbols (+ or -) marked in the compartment.
3. Replace the cover.

NOTE: If the remote control does not work or operates erratically, replace both batteries.

CAUTIONS: Use only fresh batteries of the recommended size and type.

Always remove old or weak batteries. They can leak chemicals that can damage electronic circuits.

USING THE REMOTE CONTROL

Some of the remote control's buttons are duplicated on the VCR's front panel. You can use these buttons to perform identical procedures either at the VCR or by remote control.

To use the remote control, point it at the VCR and press the desired button(s).

SETTING THE CLOCK

Use the remote control to set the clock. Set the clock accurately for proper automatic-timer and quick-set recording. We suggest you refer to a TV or radio station as your source.

NOTE: For "Setting the Clock" and "Automatic Timer Recording", the instructions refer to the TV's on-screen display indicators. Some of the indicators on the VCR's display vary slightly.

In the follow example the clock is set to 9:30 PM July 4, 1993.

1. Press POWER to turn on the VCR.
2. Turn on your TV and set it to the same channel as the VCR's CH.3/4 switch on the back of the VCR.

NOTE: If your TV has A/V inputs, be sure to set it to the video mode.

3. Press MENU on the remote control. The menu appears on the TV screen.

PUSH NUMBER SHOWN
1 CLOCK SET
2 NORMAL PROGRAM

```

3 DAILY PROGRAM
4 WEEKLY PROGRAM
5 PROGRAM REVIEW
6 SET UP
TO END PUSH MENU

```

- Press 1 to enter the clock setting mode. The first hour digit flashes.

```

CLOCK SET

  \|/
TIME  --:--
  /|\

TO END PUSH MENU

```

- Press the remote control's number buttons to set the correct hour and minute. (Press 0 9 3 and 0 to set 9:30, for our example).

```

CLOCK SET
          \|/
TIME 09:30  - - - -
          /|\
\ | | | | | | /
-- AM=1  PM=2 --
  | | | | | \

TO END PUSH MENU

```

NOTES: Precede all single-digit entries with a 0. If you press a wrong number button, press CLEAR, then press the correct button.

- Press 1 to select AM or 2 to select PM. Your VCR uses a 12-hour clock. (Press 2 to set PM, for our example)

```

CLOCK SET
TIME 09:30 PM

MONTH/DAY/YEAR
DATE --/--/--
TO END PUSH MENU

```

- Press the number buttons to set the correct date. (Press 0 7 0 4 9 and 3 to set July 4, 1993, for our example).

When you enter the date, the corresponding day of the week appears and the VCR's display shows the clock.

- Review the entered information.

If the information is not correct, press CLEAR as necessary to erase the wrong information. Then enter the correct information.

When the information is correct, press MENU. The menu reappears on the TV screen.

9. Press MENU to clear the menu from the screen.

NOTES: If you enter an invalid date or time (13:00, for example), ? flashes on the TV screen. Enter the correct date or time.

If the display shows an abnormal reading or no reading, unplug the power cord for about 3 seconds. Then plug it back in and repeat Steps 1-9 to reset the clock.

(ALL-10/31/94)