

If you follow the instructions in this manual and still have trouble operating your VCR, refer to the following troubleshooting chart.

| SYMPTOM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|--|---|---|
| No Power. | The power cord is not connected. | Plug the power cord into an AC outlet. |
| Timer recording is not possible. | The program timer is not set or is set incorrectly. | Set the program timer correctly. |
| | The power is on. | Turn off the power. |
| Cannot record. | The erase-protection tab missing. | Place a piece of plastic tape over the tab hole. |
| Picture is poor on playback. | The TV channel selector is not set to the proper channel. | On playback, set the TV channel selector to channel 3 or 4. |
| | The TV fine tuning is not set correctly. | Fine tune your TV. |
| | Audio/Video connection are incorrect. | Double-check all connections. |
| Operation buttons do not work when the power is on and the cassette is inserted. | The internal mechanism might need to be reset. | Press EJECT on the VCR several times. |
| Off-the-air TV programs cannot be seen. | The connections are not correctly made. | Recheck the connections. |
| | INPUT select is not set correctly. | Set INPUT select to the tuner mode. |
| Remote control does not operate. | The batteries are weak or dead. | Replace the batteries. |