

SPARCbook™ Technical Reference

How to swap the <Ctrl> and <Caps Lock> Keys

You must have:

- OBP is .9 v1.0 (Checksum BA35)
- Microcontroller is 1.31 (Checksum 059F)

To swap CAPS and L_CTRL:

Boot system and as soon as you see:

Boot device: --> then depress pause+a to get to the "ok" prompt

>ok 0077 4000 tuck w! 26000201 uc-cmd . (return)

0

ok 014a0100 4000 tuck !! 41000300 uc-cmd . (return)

0

(reset the system)

to swap them back:

Boot system and as soon as you see:

Boot device: --> then depress pause+a to get to the "ok" prompt

ok 0077 4000 tuck w! 26000201 uc-cmd . (return)

0

ok 014a0000 4000 tuck !! 41000300 uc-cmd . (return)

0

(reset the system)