

USER Manual

1. Dip Switch Description

Switch 1 ON = Window_L(FN_L) Lock

Switch 2 ON = FN_L(Window_L) , ALT_L Swap Position

Switch 3 ON = Caps Lock , Ctrl_L Swap Position

Switch 4 ON = Window_L Change To FN_L

2. Function Key Description

FN Function Table				Note	
FN	+	ESC	=	ESC	Key Value Change
		1		F1	
		2		F2	
		3		F3	
		4		F4	
		5		F5	
		6		F6	
		7		F7	
		8		F8	
		9		F9	
		0		F10	
		-		F11	
		=		F12	
		W		↑	
		A		←	
		S		↓	
		D		→	
		Z		Delete	
		H		Print Screen	
		J		Scroll Lock	
		K		Pause	
		[Home	
]		Insert	
		'		End	
,	Page Up				
.	Page Down				
/	Delete				

FN	+	B	=	Volume +	FN Media Key		
		N		Volume -			
		V		Mute			
		C		Browser			
		;		Taskmgr.exe			
		O		Calcalater.exe			
FN	+	Space	=	Shift_L	Swap	↑	LED ON
				Window_L		←	
				Application		↓	
				Ctrl_L		→	
				↑	Swap	Shift_L	LED OFF
				←		Window_L	
				↓		Application	
				→		Ctrl_L	
FN	+	Q	=	` (~)	Change	ESC	LED ON
				ESC		` (~)	LED OFF