

# Technical Note

**TITLE:** Joystick and MIDI don't work on Tecra 510

**DATE:** 11/14/96

**PRODUCT FIELDS:** 500CDT/500CS / Tecra  
Features

---

Toshiba America Information Systems, Inc. has done its best to ensure the accuracy of this information. Toshiba America Information Systems, Inc. reserves the right to revise or make obsolete some or all of the contents without obligation to notify any person of such revisions or changes. Despite every effort to the contrary, errors, omissions or discrepancies may have occurred in preparation of this document and Toshiba America Information Systems, Inc. assumes no liability for damages incurred due in part or in whole to such errors.

---

## **INFORMATION:**

**SUBJECT:** 510, Joystick and Midi does not work. May also get repeating sound.

**Problem:**

Cannot use MIDI and JOYSTICK when changing MPU401 and JOYSTICK resources from Device Manager. User may also receive a repeating sound.

**Solution:**

Reboot the system. The sound resource will then be correctly changed.

**Cause:**

Technical restriction on changing sound resource (MPU401, JOYSTICK). Changing sound resource (MPU 401, JOYSTICK) is not handled dynamically. This means that the computer has to be rebooted after changing sound resource.

## **Keywords:**

510 510cdt 510cds joystick midi repeating sound mpu401